

9842 SERIES LOCKING PULL DOOR PREP INSTRUCTIONS


For Wood, Hollow Metal & Aluminum Doors

VP9842-1 - Bolt Down

Drill middle, bottom, and hole marked -1. Refer to your "Order Template" for the required distances between the 3 holes.

VP9842-2 - Bolt Up

Drill middle, top, and hole marked -2. Refer to your "Order Template" for the required distances between the 3 holes.

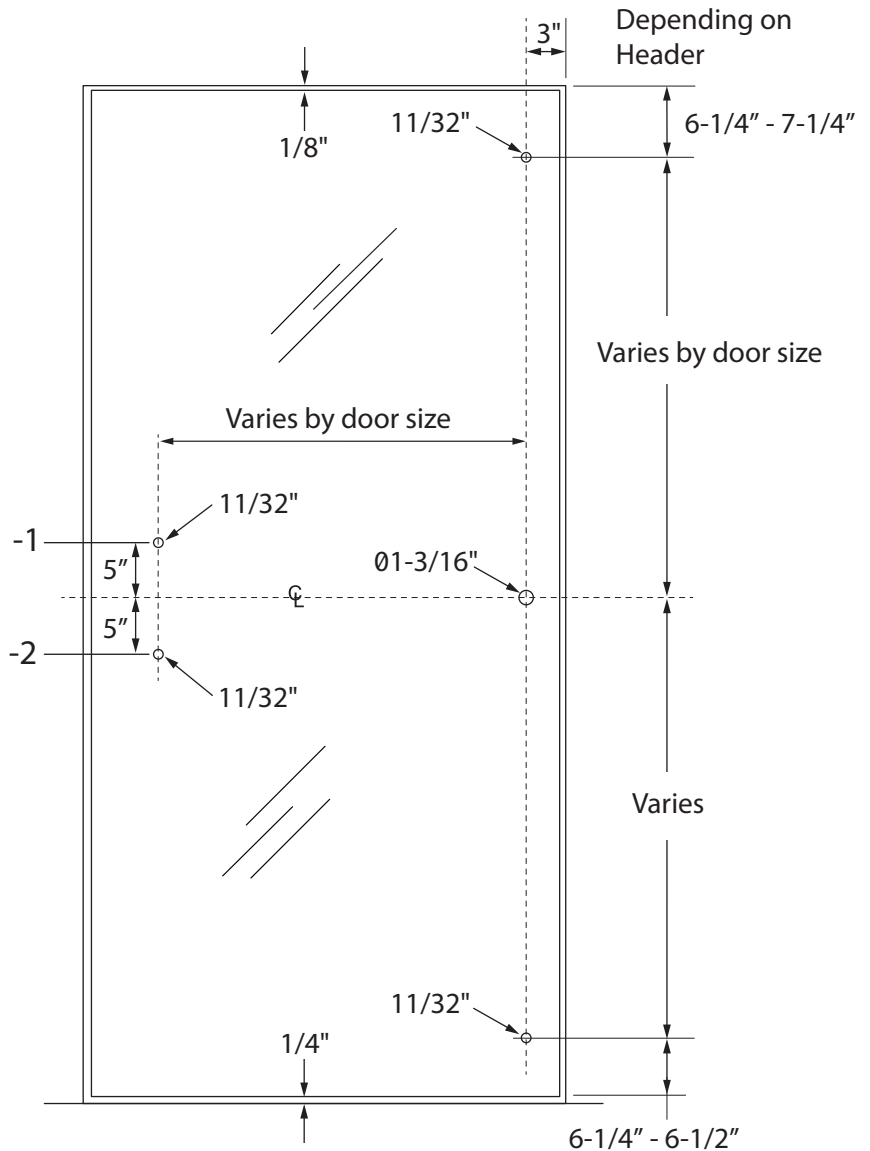

Date: 12/17 - Rev. 1